ASSEMBLY INSTRUCTIONS

Bulk Delivery Trucks

- Commercial Bulk Delivery Truck
- Industrial Bulk Delivery Truck



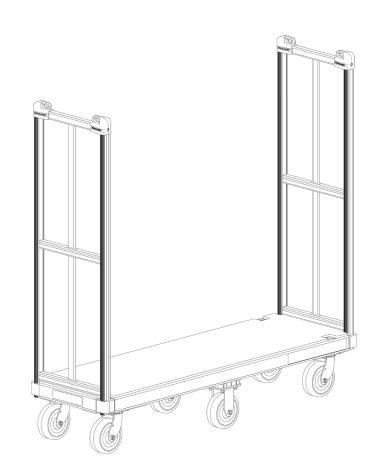



Table of Contents:

Commercial Bulk Delivery Truck
Assembly Instructions2
Industrial Bulk Delivery Truck
Assembly Instructions
Industrial Bulk Delivery Truck, Soft Drink
Option Assembly Instructions4



www.magliner.com

COMMERCIAL BULK DELIVERY TRUCK PARTS LIST

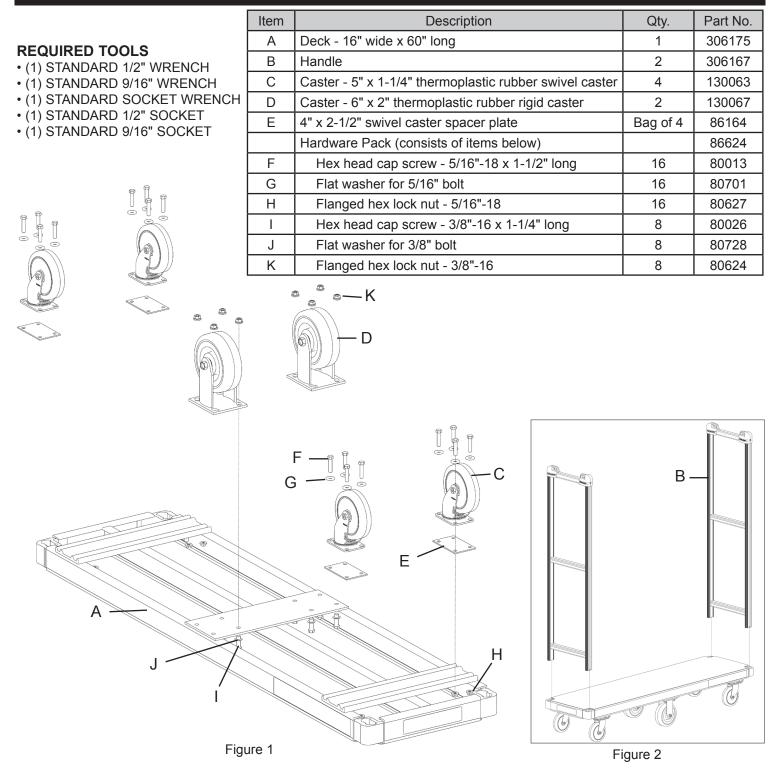

CASTER ASSEMBLY INSTRUCTIONS

- 1. Using the 5/16"-18 x 1-1/2" hex head screws (F), 5/16" washers (G) and 5/16"-18 flanged lock nuts (H), attach all four of the swivel caster plates (E) and the 5" swivel casters (C) onto the deck as shown in Figure 1.
- 2. Using the 3/8"-16 x 1-1/4" long hex head screws (I), the 3/8" washers (J) and the 3/8"-16 flanged lock nuts (K), attach both of the 6" rigid casters (D) onto the deck as shown in Figure 1.
- 3. Position the handle (B) as shown in Figure 2 and insert it into the sockets of the deck.

NOTE: Tighten all bolts securely. (Recommended: The 5/16"-18 bolts should be tightened to a torque value of 10-11 ft-lbs. and the 3/8"-16 bolts should be tightened to a torque value of 23 ft-lbs.)

INDUSTRIAL BULK DELIVERY TRUCK

REQUIRED TOOLS

- (1) STANDARD 9/16" WRENCH
- (1) STANDARD SOCKET WRENCH
- (1) STANDARD 9/16" SOCKET

Item	Description	Qty.	Part No.	
А	Deck - 18" wide x 60" long	1	-	
В	Handle	2	306150	
С	Caster - 6" x 2" thermoplastic rubber swivel caster	4	130066	
D	Caster - 6" x 2" thermoplastic rubber rigid caster	2	130067	
	Hardware Pack (consists of items below)	1	86625	
E	Hex head cap screw - 3/8"-16 x 2" long	8	80029	
F	Hex head cap screw - 3/8"-16 x 1" long	16	80025	
G	Flat washer	24	80728	
Н	Flanged lock nut - 3/8"-16	24	80624	

Note: 8" caster models use four 8" x 2" thermoplastic rubber swivel casters (130079) and two 8" x 2" thermoplastic rubber rigid casters (130029).

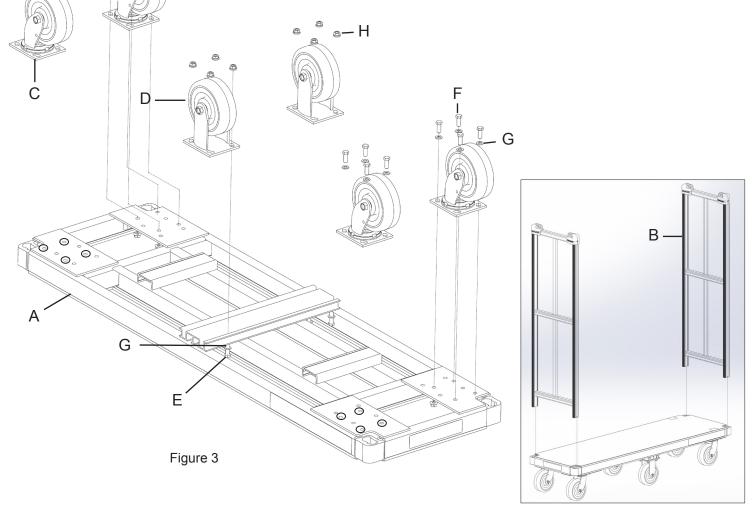



Figure 4

CASTER ASSEMBLY INSTRUCTIONS

- 1. Using the 3/8"-16 x 1" long hex head screws (F), 3/8"-16 flat washers (G) and 3/8"-16 flanged hex lock nuts (H), attach all four of the 6" swivel casters (C) onto the deck as shown in Figure 3.
- Using the 3/8"-16 x 2" long hex head screws (E), the 3/8" washers (G) and the 3/8"-16 flanged hex lock nuts (H), attach both of the 6" rigid casters (D) onto the deck as shown in Figure 3.
- 3. Position the handle (B) as shown in Figure 4 and insert it into the sockets of the deck.

NOTE: Tighten all screws securely. (Recommended: The 3/8"-16 screws should be tightened to a torque value of 23 ft-lbs.)

INDUSTRIAL BULK DELIVERY TRUCK - SOFT DRINK VERSION

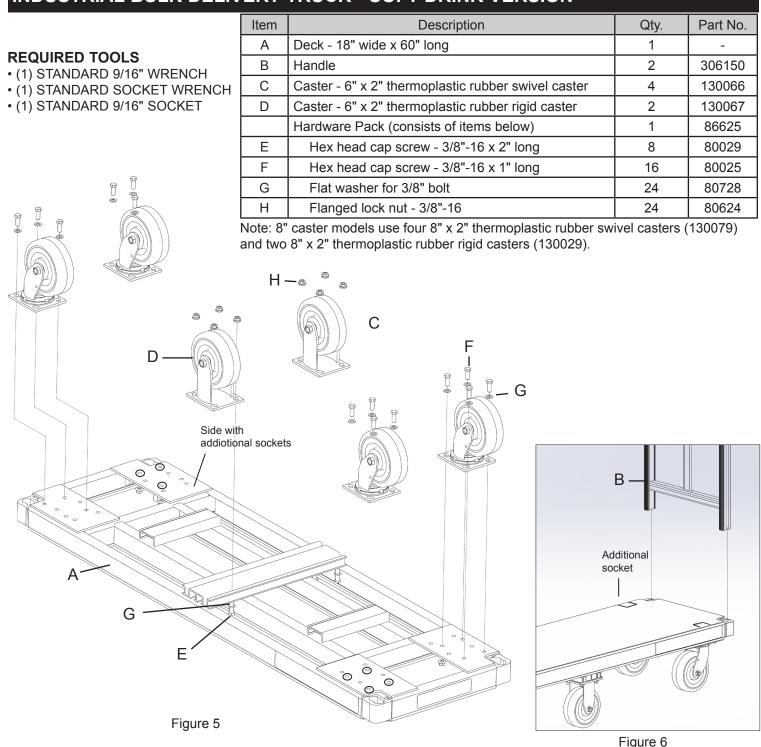

CASTER ASSEMBLY INSTRUCTIONS

Note: If you have the soft drink model, you will only install 3 sets of hardware for each caster on the end of the deck with the additional end rack sockets as shown in Figure 6. All other casters use 4 sets of hardware. Extra hardware can be discarded.

- 1. Using the 3/8"-16 x 1" long hex head screws (F), 3/8"-16 flat washers (G) and 3/8"-16 flanged hex lock nuts (H), attach all four of the 6" swivel casters (C) onto the deck as shown in Figure 5.
- 2. Using the 3/8"-16 x 2" long hex head screws (E), the 3/8" washers (G) and the 3/8"-16 flanged hex lock nuts (H), attach both of the 6" rigid casters (D) onto the deck as shown in Figure 5.
- 3. Position the handle (B) as shown in Figure 6 and insert it into the sockets of the deck.

NOTE: Tighten all screws securely. (Recommended: The 3/8"-16 screws should be tightened to a torque value of 23 ft-lbs.)